



# Niches

Niches for shampoo bottles and other utensils are convenient and decorative in any shower. In the past, the methods for installing these tileable features have been difficult, as the use of conventional backer board with supplemental waterproofing often proved less than effective. However, prefabricated wedi® Niches, innately waterproof in construction, can be installed in a clean fashion within minutes. It's also possible to cut to size and install custom niches using wedi® 1/2" Building Panels because they cut cleanly and are easily sealable over the edges.

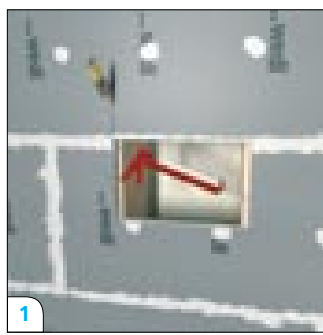

wedi® Niches are installed in a cut out in the wedi® wall and attach with it's flange right into the center of 16 o.c. studs. wedi® joint sealant is set along the connection of wall to niche.

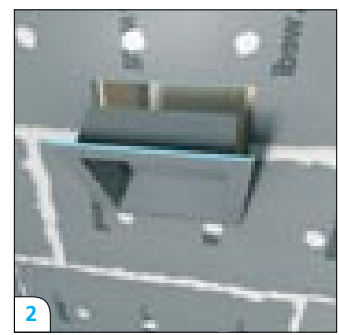

Two fasteners each side of the niche are set to create a flush transition to the wall panels. Another 1/2" bead of wedi® sealant is spread over fasteners and seams.

Prefabricated wedi® Niches, made of 1/2" Building Panels, install safely and quickly while also integrating into the wall panel assembly with wedi® fasteners for completely flush transitions. This is in contrast to so many plastic or metal niches that install with flanges against or over wall panels, making it necessary to skim coat and even this area before tiling.

## Corner Niche A



wedi® offers a modular corner niche system that provides you with a curved tileable corner and a niche built in. Especially in remodel jobs—a perfect upgrade to any shower. Just glue against the existing tiled wall and tile over right away.

## Corner Niche B



The Corner Niche B can be used as a stand alone shaving seat or foot rest or in combination with corner Niche A to assemble the curved corner from floor to ceiling.

### wedi® system components:

- wedi® Niches
- wedi® fasteners
- wedi® sealing tape
- wedi® corner niches A & B
- wedi® joint sealant