

TUB AND SHOWER SURROUND KIT

FAST, LIGHT, SAFE SHOWER AND TUB TILEBACKER WALLS

Item # 120717001

NEEDED FOR INSTALLATION

- Screw gun
- Utility knife
- Straight edge
- Measure tape
- Caulk gun


KIT INCLUDES

- 5x wedi® 3x5 ft x 1/2" Building Panel
- 5x wedi® Joint Sealant, 10.5 oz.
- 100 ct. of wedi® Tab Steel Washers
- 100 ct. of wedi® Galvanized Screws

SPECIAL FEATURES

- 100% internally and throughout waterproof and not only resistant
- Lightweight and easy to cut cleanly
- Can be notched out on bottom to perfectly connect to a tub flange
- No additional waterproofing needed like with cement or gypsum based backer boards
- Protect your framework and structures against mold, mildew and other water related damage potential using wedi® building panels
- Comes with system joint sealant and fasteners
- UPC/IPC approved / compliant
- 10 year warranty

INSTALLATION

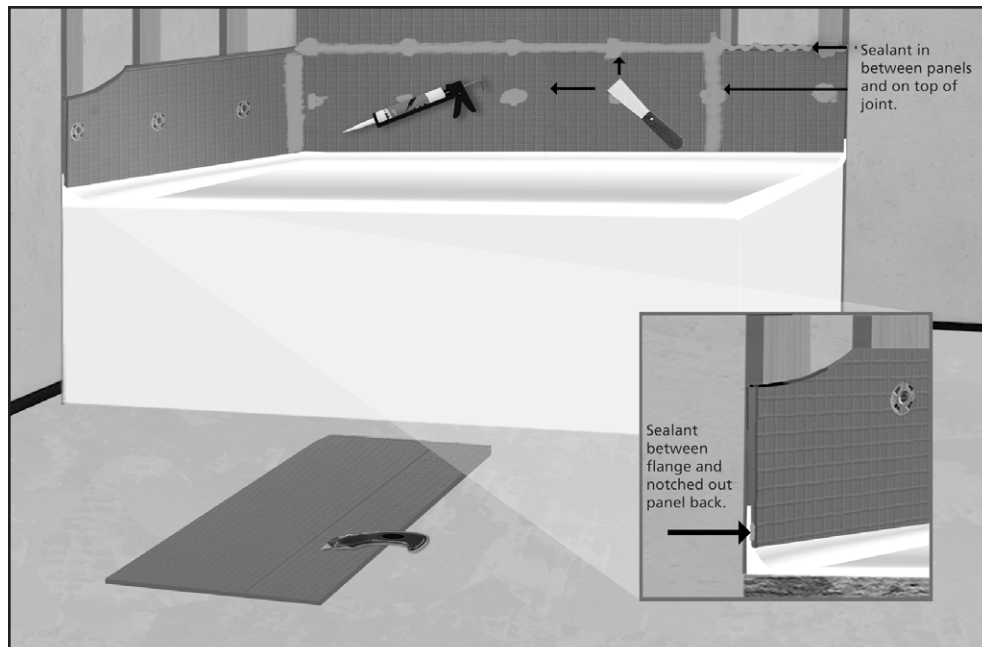

STEP 1

Measure and cut wedi® Building Panel to fit the 16 inch o.c. framework (wood or metal). Notch out all panels if installed around the perimeter of a flange tub to integrate the flange and achieve a plumb wall with plumb and square corners.

STEP 3

Apply a 1/2" bead of wedi® Joint Sealant on the top blue side of the wedi® Building Panel before installing the next panel butted tightly into the sealant. Set another wedi® washer and screw into the seam to create a flush transition between panels and smooth over access sealant. In corners a 1/2" bead of sealant is applied along the previously installed board and the panel on the side is moved tightly into the bead of sealant before fastened to the framework.

STEP 2

First attach a notched panel to the framework with a 1/2" bead of wedi® Joint Sealant between the notch and flange. Attach the panel to the framework using wedi® washers and screws at a rate of 1 every 12 inches along the studs.

STEP 4

Finally and after all wedi® Building Panels are installed a second 1/2" bead of wedi joint sealant is applied over all seams and fastener points and spread flat using a putty knife.



ECOBATH™ by wedi® is an ecologically friendly and energy saving product system providing economical efficiency during installation.

wedi® Corporation / wedi® Americas
1100 Landmeier Road Suite 200
Elk Grove Village, IL 60007

Office Tel 877.933.9334
Office Fax 847.357.9819
Office E-Mail order@wedicorp.com

www.wedicorp.com
www.facebook.com/wedicorp
www.youtube.com/wedicorp