

SAVE ENERGY, TIME & MONEY


INSULATING UNDERLAYMENT PANELS FOR ELECTRIC FLOOR WARMING SYSTEMS

Item # 120737001

The new revolutionary ECOBATH™ Floor Warming Underlayment Panels save time and money while conserving energy when used in conjunction with any common electric underfloor heating system. The extruded polystyrene foam core construction makes the system 100% waterproof and the perfect heat insulator and thermal barrier. ECOBATH™ Floor Warming Underlayment Panels are equipped with a cement resin surface that is reinforced with a fiberglass mesh and provides an ideal bond to any common tile adhesive or self-leveling product.

Your customers will enjoy:

- Shorter warm up times
- Comfortable, consistently warm tile floors
- Lower energy costs

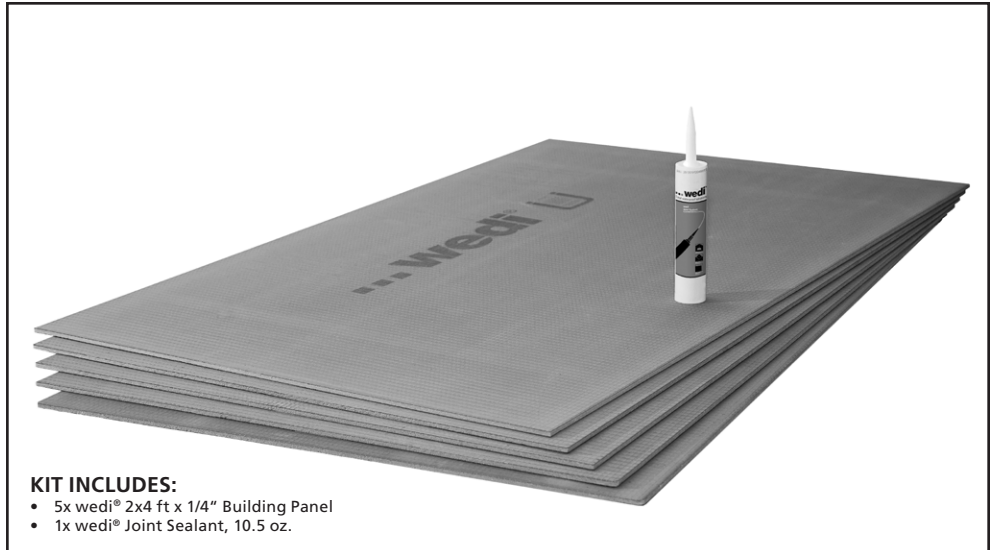

- KIT INCLUDES:**
- 5x wedi® 2x4 ft x 1/4" Building Panel
 - 1x wedi® Joint Sealant, 10.5 oz.

EASY INSTALLATION

STEP 1

Make sure the concrete floor is even, fully cured and free of debris, oil or waxes. The wedi® Building Panels are installed using modified thinset mortar using a 1/4" x 1/4" notch trowel.

STEP 2

Stagger all joints when laying wedi® Building Panels on the floor. Apply some weight on the boards during initial thinset setting time and especially over board transitions.


STEP 3

wedi® Joint Sealant can be applied with a continuous 1/4" bead while setting the panels in position (seams butted tightly) or after they are set and with the bead of sealant installed over the seam before it is spread flat using a putty knife. All excess sealant must be spread flat so joint sealant covers the seams at least 1/2" to 3/4" on either side of the seam.


STEP 4

Install electric floor warming system according to manufacturers recommendations. Please make sure the wedi® Building Panels are not punctured by staples or other mounting devices.


STEP 1

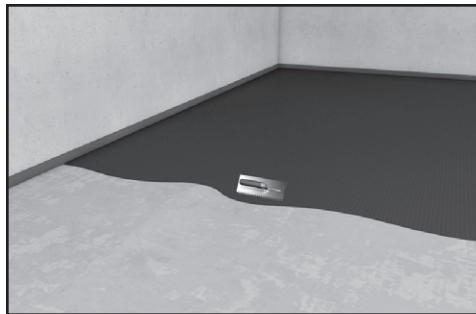


STEP 2

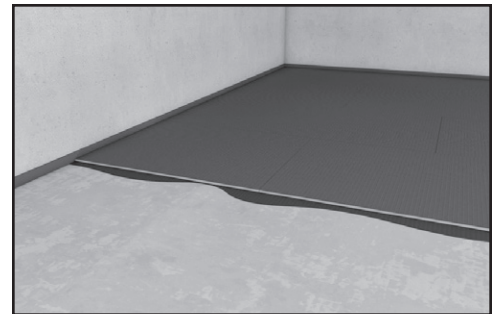

STEP 3

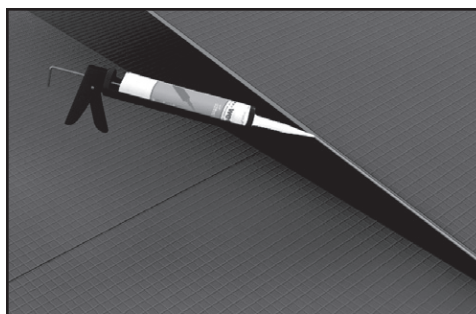

STEP 4

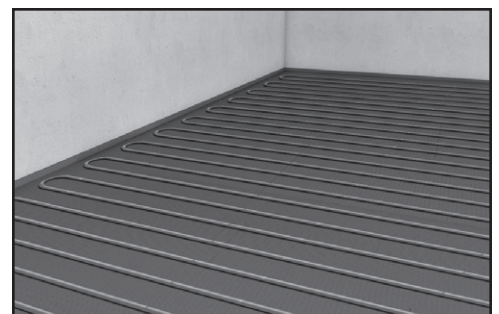

ECOBATH™ by wedi® is an ecologically friendly and energy saving product system providing economical efficiency during installation.

wedi® Corporation / wedi® Americas
1100 Landmeier Road Suite 200
Elk Grove Village, IL 60007

Office Tel 877.933.9334
Office Fax 847.357.9819
Office E-Mail order@wedcorp.com

www.wedcorp.com
www.facebook.com/wedcorp
www.youtube.com/wedcorp