



## Fundo Shower System

### Installation Requirements:


- Sub floor must be level
- 2" pipe must be cut flush with sub floor top surface
- 5" diam. hole around the 2" pipe center must be cut into the sub floor to allow for wedi drain insert

Wedi Fundo – Pre-Sloped and 100% waterproof Shower Pan ready for tiling, incl. Drain unit.

**System does not require any pre sloping , pan liner or weep hole drain.**

<b>Material properties foam core</b>	see Building Panel, 100% waterproof
<b>Standard sizes</b>	3 x 3', 3 x 4', 3 x 5', 4 x 4', 4 x 5', 4 x 6', 5 x 5', 5 x 6', 4 x 7', 5 x 7', 3 x 6' w. Offset drain
<b>Slope on surface</b>	1/4"/ft./ Building Code compliant
<b>Thickness outer edge</b>	1 1/2- 1 7/8 "
<b>Drain specification</b>	Oatey No caulk drain/ PVC or Brass Can be used to seal around 2" ABS or PVC pipes. Special sealing gaskets for 2" copper and cast iron pipes available upon request. All drains are pressure fitting drains and the installation does not require a plumbing license.
<b>Compliance with US &amp; Canada Codes</b>	UPC / IAPMO File 4953

### wedi FundoShower Kits

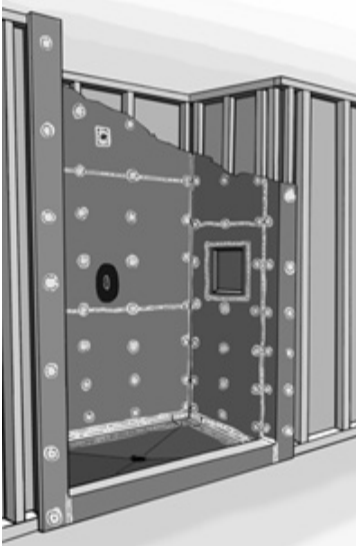

available in

3 x 3', 3 x 4', 3 x 5', 4 x 4', 4 x 5', 4 x 6' + 3 x 6' with Offset drain

Kits contain:

- wedi Fundo Shower Pan & Drain Unit
- wedi Building Panels for 3 walls, 80 inches high
- wedi Sealant
- wedi Fasteners
- Installation Manual
- wedi Full Foam Curb

**IMPORTANT NOTE:** wedi Fundo shower systems can only be installed with wedi building panels and curbs to guarantee a waterproof assembly. Follow our installation requirements and manuals