


wedi Fundo Shower System Installation Checklist

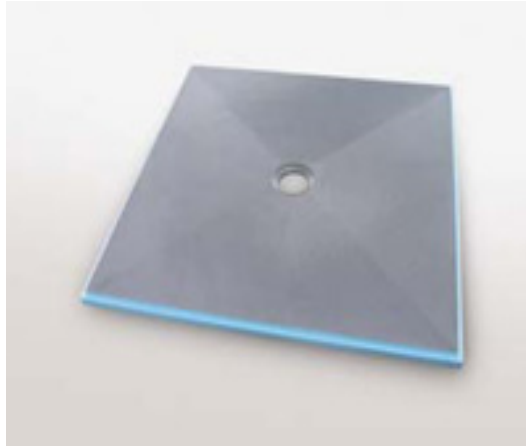

Prior To Installation:

- ✓ **Subfloor is sound, level and meets deflection criteria.**
- ✓ **2" PVC or ABS pipe is cut flush/even with subfloor top surface and is centered.**
- ✓ **2" drain assembly below floor is stabilized and will not sink under water load.**
- ✓ **Only wedi products (Building Panels, Curb, Joint Sealant and Fasteners) are used for wedi Fundo Shower System assembly.**
- ✓ **Installer has received instructions from wedi technical sales staff or is informed about proper installation methods as described in wedi Building Solutions brochure/installation video.**

After Installation:

- ✓ **Using a 2" drain plug, the wedi pressure fit drain/sealing gasket is water tested prior to ceramic tile installation.**
- ✓ **All bottom perimeter joints, curb joints and vertical joints are covered with wedi Joint Sealant. Coverage should be continuously visible for at least $\frac{3}{4}$ " on each side of the joint.**
- ✓ **No mastic adhesives are used to install ceramic tile. A high quality modified thinset mortar is recommended.**

