


# Fundo Primo Shower System

## Product Quantity Estimates by Installation Size

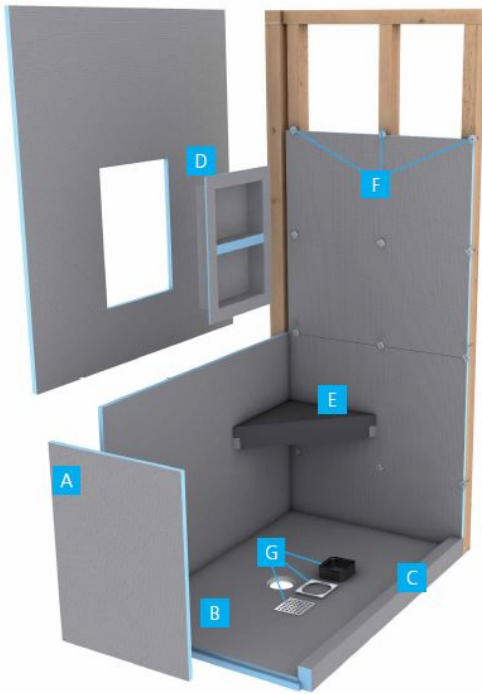

### wedi Fundo Primo Shower System

- A** wedi Building Panel
- B** wedi Fundo Primo Shower Base
- C** wedi Full Foam Shower Curb Lean
- D** wedi Recessed Niche with shelves
- E** wedi Suspended Corner Seat
- F** wedi Fasteners
- G** wedi Drain Kit

wedi Fundo Primo Shower 36" x 36"		6 1/2' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 36" x 36"	073735507	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x 1/2"	010717064	4	5
wedi Curb 3'	US3000011	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi 1/4" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	7-8	8-9
wedi Fundo Primo Shower 36" x 48"		6 1/2' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 36" x 48"	073735516	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x 1/2"	010717064	6	6
wedi Curb 5'	074319002	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi 1/4" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	8-9	9-10
wedi Fundo Primo Shower 48" x 48"		6 1/2' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 48" x 48"	073735505	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x 1/2"	010717064	7	7
wedi Curb 5'	074319002	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi 1/4" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	8-9	9-10

\*Materials calculated for shower walls 6 1/2 ft. and 8 ft. tall, including three framed walls (one short back wall, two short side wall) to be tiled in wet area. Curb/ramp is optional and for one long side of a rectangular shower, seats optional, bench is for one short shower wall and optional, soap niches optional. See back page for options. All 36" x 72" shower bases are designed to be cut back to 36" x 60" tub replacement sizes and product quantities are referenced for the 36" x 60" shower space. Estimates not guaranteed and must be field verified by customer (framing may vary).

# Fundo Primo Shower System

## Product Quantity Estimates by Installation Size



wedi Fundo Primo Shower 36" x 60"		6 1/2' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 36" x 60"	073735506	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x 1/2"	010717064	6	6
wedi Curb 5'	074319002	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi 1/4" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	8-9	9-10
wedi Fundo Primo Shower 36" x 72" center drain		6 1/2' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 36" x 72" ctr. drain	073735525	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x 1/2"	010717064	6	6
wedi Curb 8'	074319001	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi 1/4" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	8-9	9-10
wedi Fundo Primo Shower 36" x 72" offset drain		6 1/2' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 36" x 72" o.s. drain	073735521	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x 1/2"	010717064	6	6
wedi Curb 8'	074319001	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi 1/4" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	8-9	9-10
wedi Fundo Primo Shower 48" x 60"		6 1/2' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 48" x 60"	073735509	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x 1/2"	010717064	7	7
wedi Curb 5'	074319002	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi 1/4" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	9-10	10-11
wedi Fundo Primo Shower 48" x 72"		6 1/2' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 48" x 72"	073735508	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x 1/2"	010717064	8	9
wedi Curb 8'	074319001	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	2
wedi 1/4" Metal Washers with Tabs 100 ct.	US5000014	1	2
wedi Joint Sealant 10.5 oz. cartridge	US5000013	9-10	11-12

\*Materials calculated for shower walls 6 1/2 ft. and 8 ft. tall, including three framed walls (one short back wall, two short side wall) to be tiled in wet area. Curb/ramp is optional and for one long side of a rectangular shower, seats optional, bench is for one short shower wall and optional, soap niches optional. See back page for options. All 36" x 72" shower bases are designed to be cut back to 36" x 60" tub replacement sizes and product quantities are referenced for the 36" x 60" shower space. Estimates not guaranteed and must be field verified by customer (framing may vary).

# Fundo Primo Shower System

## Product Quantity Estimates by Installation Size



wedi Fundo Primo Shower 60" x 60"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 60" x 60"	073735518	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	7	8
wedi Curb 5'	074319002	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	2	2
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	2	2
wedi Joint Sealant 10.5 oz. cartridge	US5000013	12-13	13-14
wedi Fundo Primo Shower 60" x 72"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 60" x 72"	073735519	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	8	9
wedi Curb 8'	074319001	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	2	2
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	2	2
wedi Joint Sealant 10.5 oz. cartridge	US5000013	12-13	13-14
wedi Fundo Primo Shower 48" x 84"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 48" x 84"	073735522	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	9	10
wedi Curb 8'	074319001	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	2	2
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	2	2
wedi Joint Sealant 10.5 oz. cartridge	US5000013	12-13	13-14
wedi Fundo Primo Shower 60" x 84"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 60" x 84"	073735523	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	10	10
wedi Curb 8'	074319001	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	2	2
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	2	2
wedi Joint Sealant 10.5 oz. cartridge	US5000013	14-15	15-16
wedi Fundo Primo Shower 72" x 72"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Primo Shower Base 72" x 72"	073735524	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	10	10
wedi Curb 8'	074319001	1	1
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	2	2
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	2	2
wedi Joint Sealant 10.5 oz. cartridge	US5000013	15-16	15-16

\*Materials calculated for shower walls 6 1/2 ft. and 8 ft. tall, including three framed walls (one short back wall, two short side wall) to be tiled in wet area. Curb/ramp is optional and for one long side of a rectangular shower, seats optional, bench is for one short shower wall and optional, soap niches optional. See back page for options. All 36" x 72" shower bases are designed to be cut back to 36" x 60" tub replacement sizes and product quantities are referenced for the 36" x 60" shower space. Estimates not guaranteed and must be field verified by customer (framing may vary).

# Fundo Primo Shower System

## Product Quantity Estimates by Installation Size



### Additional Options/Substitutions

#### wedi Building Panel

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Building Panel 3' x 8' x 1/2"	010000912	_____
Building Panel 4' x 8' x 1/2"	010001612	_____

#### wedi Recessed Niches

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Niche 16" x 8"	US3000003	_____
Niche 16" x 12"	US3000004	_____
Niche 16" x 16"	US3000005	_____
Niche 16" x 22" w/adj. shelf	US3000007	_____
Niche 16" x 30" Cathedral	US3000016	_____
Niche Lean Combo 16" x 42"	US3000006	_____

#### wedi Shower Seats/Benches

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Suspended Corner Seat M	US3000001	_____
Suspended Corner Seat L	US3000002	_____
Triangle Corner Seat	073784101	_____
Rectangular Bench	073784100	_____
Sanoasa Shower Bench 1M	076447030	_____
Sanoasa Shower Bench 1L	076447031	_____
Sanoasa Shower Bench 2M	076447032	_____
Sanoasa Shower Bench 2L	076447033	_____
Sanoasa Shower Bench 3M	076447034	_____
Sanoasa Shower Bench 3L	076447035	_____

#### wedi Shower Curb

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Curb Lean 5'	074319007	_____
Curb Lean 8'	074319008	_____
Curb Over (Cap) 5'	US3000008	_____
Curb Over (Cap) 8'	US3000010	_____

#### wedi Shower Base Extensions

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Straight Extension 48" x 24"	073783528	_____
Straight Extension Lean 72" x 12"	073783523	_____

#### wedi Shower Ramp

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Sloped Shower Ramp 5' x 12"	073736517	_____

#### wedi Fundo Cover Plates

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Oil Rubbed Bronze Cover Plate	US1000008	_____
Fino Tileable Cover Plate (square)	US1000020	_____
Fino Cover Set 1.1 (square/daisy)	US1000021	_____
Fino Cover Set 1.1.2 (round/daisy)	US1000023	_____
Fino Cover Set 3.1 (square/pebble)	US1000024	_____
Fino Cover Set 3.1.2(round/pebble)	US1000026	_____

\*Materials calculated for shower walls 6 1/2 ft. and 8 ft. tall, including three framed walls (one short back wall, two short side wall) to be tiled in wet area. Curb/ramp is optional and for one long side of a rectangular shower, seats optional, bench is for one short shower wall and optional, soap niches optional. See back page for options. All 36" x 72" shower bases are designed to be cut back to 36" x 60" tub replacement sizes and product quantities are referenced for the 36" x 60" shower space. Estimates not guaranteed and must be field verified by customer (framing may vary).